




# GC-F012 **ARGB FAN**

Installation Guide

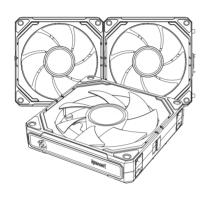


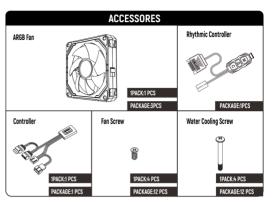

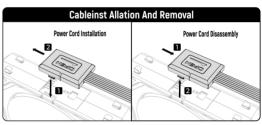

**Mini Controller Instructions** 



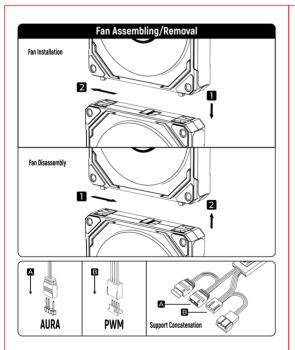

S KEY:

Click to switch the light speed, cycling through 5 levels;

-in the single-color constant brightness mode, click to adjust the light brightness, cycling through 4 levels;

-in music mode, press the 5 key to adjust the sensitivity, cycling through 3 levels;

-in any mode, long press the 5 key for 22 seconds to turn off the light.

(After the light is turned off, press the M or C key to restore the light.)

Click to switch to the next lighting mode, cycling through all modes; long press the "M" key to enter/exit music mode, and in music mode, click to switch the type of music mode.

In any mode, click the C key to switch to the single-color constant brightness mode, and click again to switch the color, cycling through 7 colors.

## RESET KEY:

RESET NET: 
(If the "RESET SW" connector of the MINI controller is connected to the "RESET SW" connector on the case).

- Click the RESET key on the case to switch modes (including music mode);

- Jong press the RESET key on the case for 2 seconds to cycle through single-color mode, multi-color mode, music mode, and turning of the light in sequence, music mode, and turning of the light in sequence.

### Sound Rhythm:

Built-in listening function, automatically recognizes music rhythm to achieve a wonderful interaction between light and music, moving with the sound.

#### NOTE:

A single connector can connect up to 6 fans at the same time, and one controller can connect up to 10 fans. Overloading the installation may damage the device.



